

**SUGGESTED TOOLS FOR
REMOVAL OF “K”
SERIES ROTARY
BAL SEAL® FROM THE
HOUSING BORE**

Technical Report
TR-97 (Rev. Ø; 05-10-01)
(50-608)



19650 Pauling
Foothill Ranch, CA 92610-2610
Tel (949) 460-2100
Fax (949) 460-2300
Email: sales@balseal.com
www.balseal.com

Jollemanhof 16, 5th floor
1019 GW Amsterdam
The Netherlands
Tel: +31 20 638 6523
Fax: +31 20 625 6018

TABLE OF CONTENTS

- 1.0 Introduction
- 2.0 Discussion
- 3.0 Disassembly
- 4.0 Standard removal tools

The information, descriptions, recommendations and opinions set forth herein are offered solely for your consideration, inquiry, and verification and are not, in part or in whole, to be construed as constituting a warranty, expressed or implied, nor shall they form or be a part of the basis of any bargain with Bal Seal Engineering. If any sample or model was shown to or provided by Buyer/User, such sample or model was used merely to illustrate the general description and type of goods. Such use is not to be construed as a warranty that the goods will conform to the sample or model. Furthermore, THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ALL OTHER WARRANTIES, IMPLIED OR EXPRESSED, ARE EXCLUDED AND SHALL NOT APPLY. This document provides product options for further investigation by Buyers/Users having technical expertise. The Buyer/User, through its own analysis and testing, is solely responsible for making the final selection of the products and for assuming that all performance, safety and warning requirements for the application are met. It is recommended that Buyers/Users run evaluation testing under actual service conditions to determine whether proposed Bal Seal products are suitable for the intended purpose. Nothing contained herein or in any of our literature shall be considered a license or recommendation for any use that may infringe patent rights. (LE-17)

PATENTS: The items described in this report include products that are the subject of the following issued United States patents: 5,979,904; 5,994,856; 6,050,572; 5,984,316; 6,161,838 and others, as well as foreign patents or products where patents are pending. (LE-88G)

©Copyright 2001, Bal Seal Engineering Co., Inc. U.S.A.

Use or disclosure of data contained on this sheet is subject to the restrictions contained in the disclaimer located in the Table of Contents of this report.

Bal Seal Engineering, Inc. • Foothill Ranch, CA USA 92610-2610 • Tel: 949 460-2100; Fax: 949 460-2300
Bal Seal Engineering Europe, B.V. • Amsterdam, The Netherlands • Tel: +31 20 638 6523, Fax: +31 20 625 6018
Email: sales@balseal.com • Web: www.balseal.com

1.0 INTRODUCTION

This report provides reference for commercially available tools that may be used for the removal of 'K' SERIES ROTARY Bal Seal® spring-energized seals which are assembled into the housing/bore.

2.0 DISCUSSION

A Bal Seal assembled in a through bore may be removed by forcing the seal out with a tool smaller in diameter than the bore diameter. However, a Bal Seal in the blind bore may require a special tool for removal. See Figure 1 of the KSX series assembled Bal Seal in a blind bore.

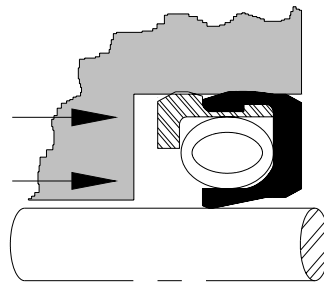


FIGURE 1: KSX Bal Seal in a blind bore

3.0 DISASSEMBLY

Typical Procedure for removing seal from bore. (See Figure 2)

Extend the narrow jaws of an internal puller through the center of the seal to be pulled out. Make sure that the grip of the seal is secure. Then pull out seal using appropriate method.

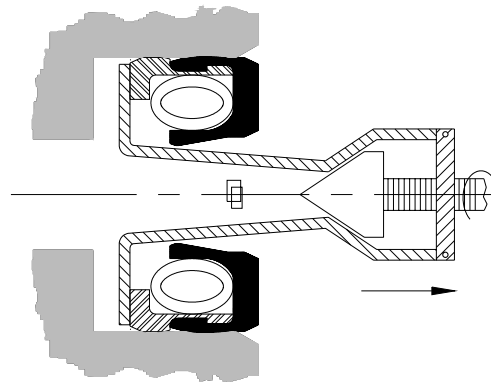


FIGURE 2: Removing a Bal Seal

4.0 STANDARD REMOVAL TOOLS

There are various pulling tools, available commercially, for removing assembled seals as noted in Figures 3 and 4.

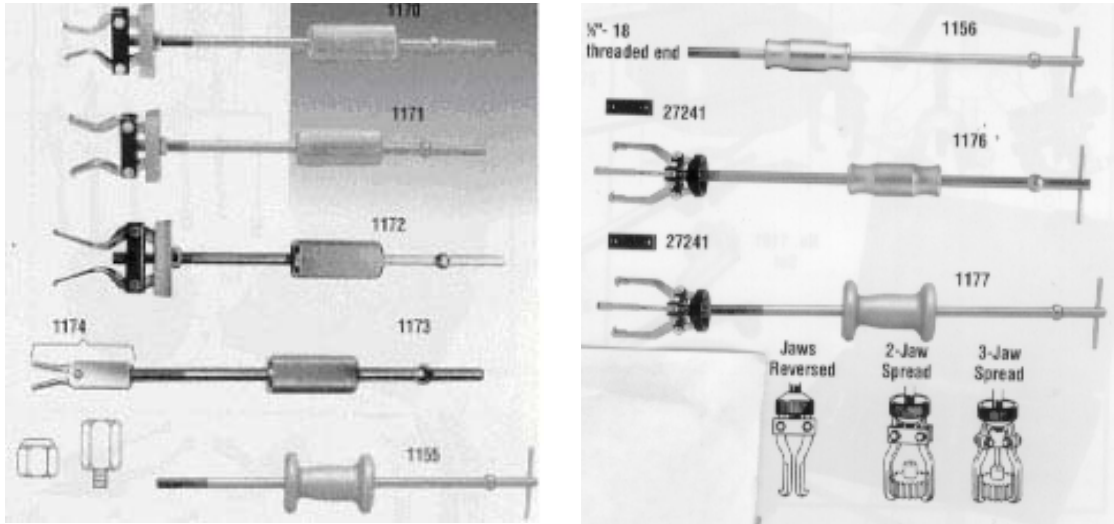


FIGURE 3: Pulling tools from SPX Power Team, Owatonna, MN, www.powerteam.com

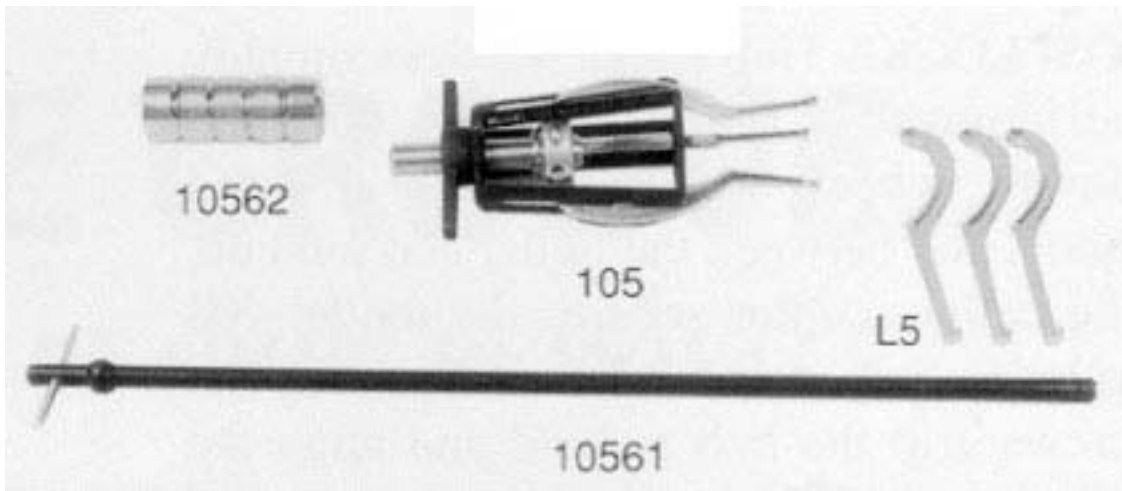


FIGURE 4: Puller set from Posi Lock Puller, Inc., Cooperstown, ND, www.posilock.com